

## 8. PARTS LIST

This parts list is limited to giving part numbers for complete poker heads, flexible drives and their component parts and complete couplings. A separate manual is available from Fairport Construction Equipment Ltd giving full details on servicing and maintenance procedures on poker heads, couplings and flexible drives and includes full details on spare parts complete with parts diagrams.

<u>Description</u>	<u>Part No.</u>
281 poker head	W92106
385 poker head	W92013
501 poker head c/w sleeve	W92019
651 poker head c/w sleeve	W92031
3metre flexible drive for 281 poker	W92111
Outer case for above	W92110
Inner core for above	W92081
5metre flexible shaft for 281 poker	W92287
Outer case for above	W92288
Inner core for above	W92289
6 meter flexible drive for 281 poker	W92492
Outer case for above	W92515
Inner core complete	W92516
3meter flexible drive for 501, 385, 651 pokers	W92040
Outer case for above	W92041
Inner core for above	W92042
5metre flexible shaft for 501, 385. 651 pokers	W92287
Outer case for above	W92288
Inner flex for above	W92289
6 meter flexible drive for 501,385, 651 pokers	W92215
Outer case for above	W92515
Inner core for above	W92516
Couplings:	
Metrix	W92050
CEL	W92051
Winget	W92051
Dynapac	W92051
Wacker	W92051
Warsop	W92283
Fyne	W92054
CEL sq. drive	W92518
'O' ring for couplings and 385, 501 and 651 flexible shafts	W81107
'O' ring for 281 flexible shafts	W81100